Panoview

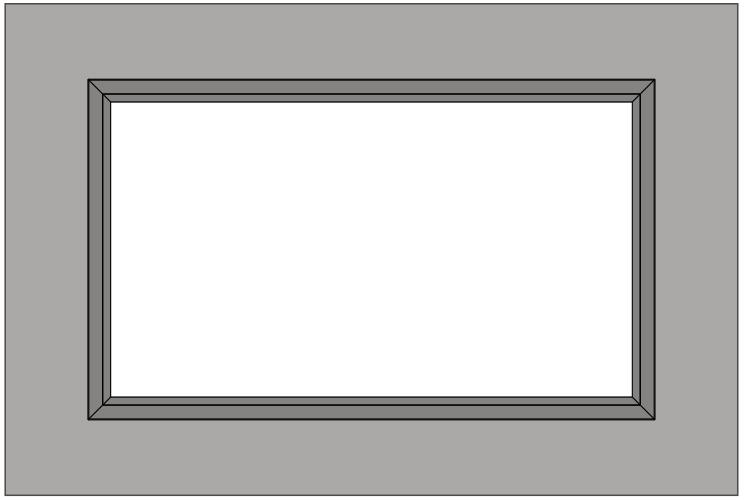

Panoview Fixed-Frame Screen
USER MANUAL

Optoma Asia Corporation
5F., No 108, Minchiuan Rd., Xindian City, Taipei 231
Tel: 886-2-2218-2360
Fax: 886-2-2218-2313
www.optoma.com.tw

Optoma USA
715 Sycamore Drive
Milpitas, CA 95035 USA
Tel: 408-383-3700
Fax: 408-383-3702
www.optomausa.com

Optoma Europe Ltd.
42 Caxton Way
The Watford Business Park
Watford Hertfordshire WD18 8QZ UK
Tel: +44 (0) 1923 691 800
Fax: +44 (0) 1923 691 888
www.optoma.co.uk

ISO9001:2000
International Certification

Description

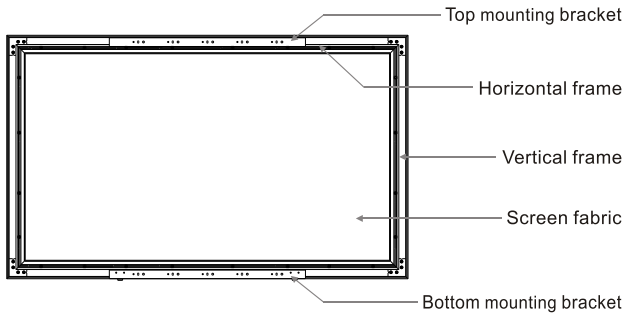

Accessories

Unpack and inspect the box contents to ensure all parts listed below are in the box. If something is missing, please contact customer service.

- Horizontal frame (2pcs)

- Vertical frame (2pcs)

- Corner bracket (4pcs)

- Top mounting bracket (1pc)

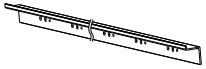

- Horizontal tensioning rod (2pcs)

- Vertical tensioning rod (2pcs)

- 5x10mm corner screw (16pcs)

- Bottom mounting bracket (1pc)

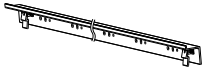

- ø 5x40 mm tapping screw with anchor (4pcs)

- ø 5x60mm wooden screw (4pcs)

- Attaching lug

- Instruction manual (1pc)

Attaching lug

Format	Size(inch)	60"	72"	77"	80"	84"	92"	100"	106"	112"	120"	135"	150"
4:3	Qty(pcs)	20	20	24	24	24	26	28	30	30	32	34	38
16:9	Qty(pcs)	18	22	22	22	24	24	28	28	30	30	34	38

The quantity of attaching lugs varies with screen size and format. Please see the table above for the number of attaching lugs included with your screen.

Warnings

- When installing the screen fabric, make sure the correct side is facing forward. The back side of the screen will be labeled with a sticker.
- Please read the following as any damage to the screen surface will affect the quality of the picture:
  1. The frame is made with lightweight aluminium. Please handle with care and do not force assembly.
  2. Avoid contact or touching the screen surface as it may cause scratches or tears.
  3. Do not write or draw on the surface.
  4. Clean the screen with a soft cloth and lukewarm water. Do not use any detergent or cleaning products.
  5. Use a cotton cloth to carefully wipe off the dust on the frame to prevent damage.
  6. If it is not in use for a long period of time, cover the screen to shut out dust and dirt.
- To prevent unnecessary damage, the operating and maintenance of the screen should be done by adults.

Ignoring the safety warnings may lead to injuries and/or damaging the product.	Please contact your local dealer for repairs or maintenance. Please contact our company if you have any further questions. Avoid taking apart the fixtures yourself. Loose parts may cause the screen to fall.
Fixtures should be installed in a secure place to avoid accidents or the screen falling.	

Do not take apart and replace with unknown parts. If there are any problems, please contact your local dealer. Product specifications are subject to change.

8. Hook the screen on to the mounting brackets. The secure locking lever will automatically engage (Figure 21 & 22).

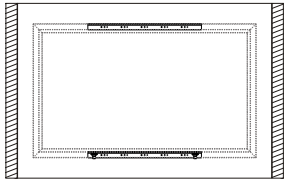

Figure 21

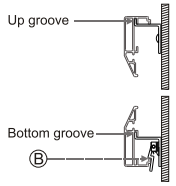

Figure 22

9. To remove the screen, press the secure levers towards wall to release bottom frame. Lift clear of the brackets and pull away (Figure 23 & 24).

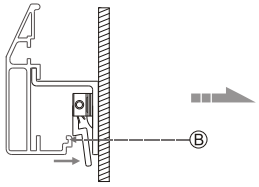

Figure 23

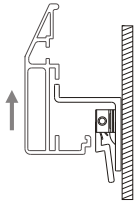

Figure 24

Installation

For best results, please use clean flat work surface before beginning screen assembly. It is recommended to use an area larger than the overall screen size.

1. Starting with the horizontal and vertical frames (Figure1), insert the attaching lugs into the track on the back of the frames (Figure 2 & 3). Match one lug to each arrow on the frame.

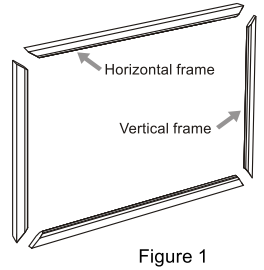

Figure 1

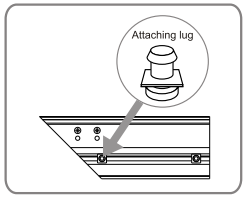

Figure 2

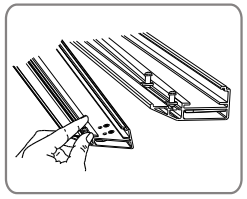

Figure 3

2. Connect the horizontal and vertical frames with the corner brackets (Figure 4 & 5). Assemble all 4 corners (Figure 6). Insert and tighten the corner screws (Figure 7).

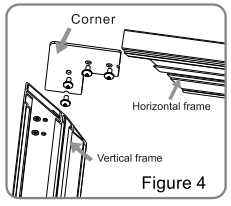

Figure 4

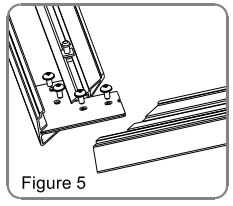

Figure 5

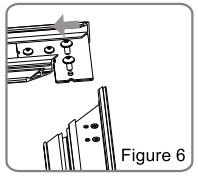

Figure 6

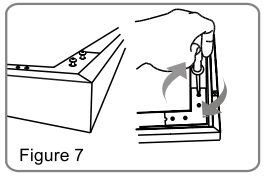

Figure 7

3. Carefully unfold the screen.
   NOTE: FOR BEST RESULTS, USE CAUTION NOT TO TOUCH THE SCREEN SURFACE.
4. On the edges of the screen fabric, insert the four tensioning rods (Figure 8 to 10).

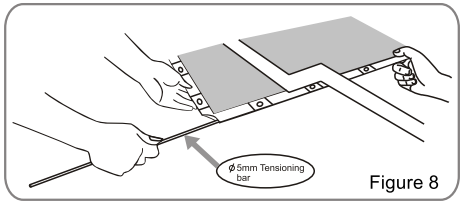

Figure 8

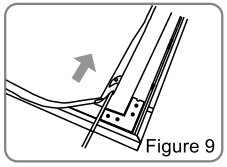
Figure 9

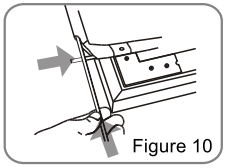
Figure 10

5. Line up the screen eyelets with the attaching lugs. Insert the attaching lugs into the screen fabric eyelets making sure the tensioning rods are on the outside of the attaching lugs (Figure 11 to 15).
   TIP: It is easier to do the longer horizontal bars first, then the shorter vertical bars.

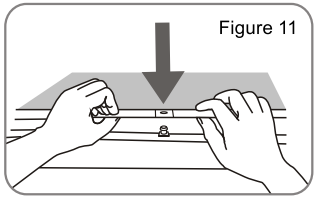
Figure 11

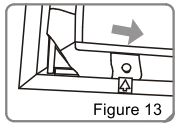
Figure 13

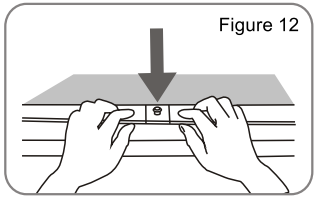
Figure 12

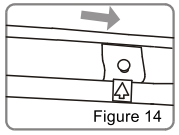
Figure 14

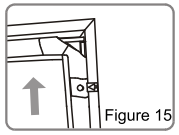
Figure 15

6. Included in the accessory kit are the top and bottom mounting brackets (Figure 16). Use these brackets to attach the screen to the wall.
   Note: The bottom mounting bracket contains 2 secure locking levers.

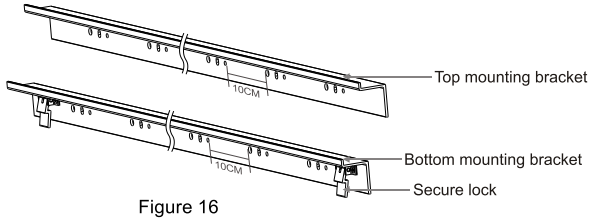

Figure 16

7. Attach the top bracket to the wall in the correct position for your projector. Use the chart below to determine the distance between the bars (Figure 16 to 18)

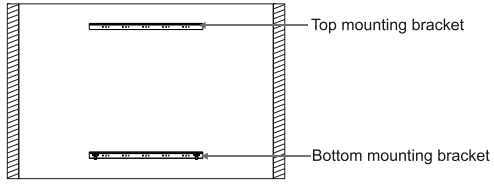

Figure 17

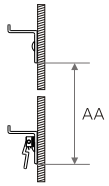

Figure 18

Top and Bottom Mounting Bracket Distance Chart (Ref. Figure 18)

Format	Size(inch)	60"	72"	77"	80"	84"	92"	100"	106"	112"	120"	135"	150"
4:3	Dist.(mm)	1025	1208	1284	1330	1391	1513	1635	1726	1818	1940	2168	2397
16:9	Dist.(mm)	858	1007	1069	1107	1156	1256	1356	1430	1505	1605	1791	1978

Mounting details:
a) Wood wall: Install the brackets using ø5 x 60 screws, 2 for each bracket (Figure 19).
b) Concrete or Dry wall: Drill 4 holes and tap the anchors onto the wall with the help of a hammer (Figure 20). Install the brackets and fasten all 4 screws.

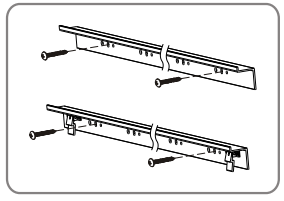
Figure 19

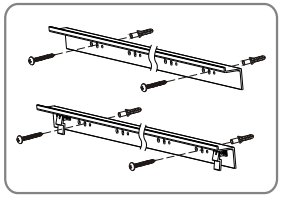
Figure 20